

OMEGA™

4K / UHD Three-Input Switcher for HDMI and USB-C with HDBaseT and HDMI Outputs

Application Programming Interface
1.0.05


Version Information

Version	Release Date	Notes
1	May 2019	Initial release

Introduction

RS-232

A 3-pin captive screw connector has been included for RS-232.

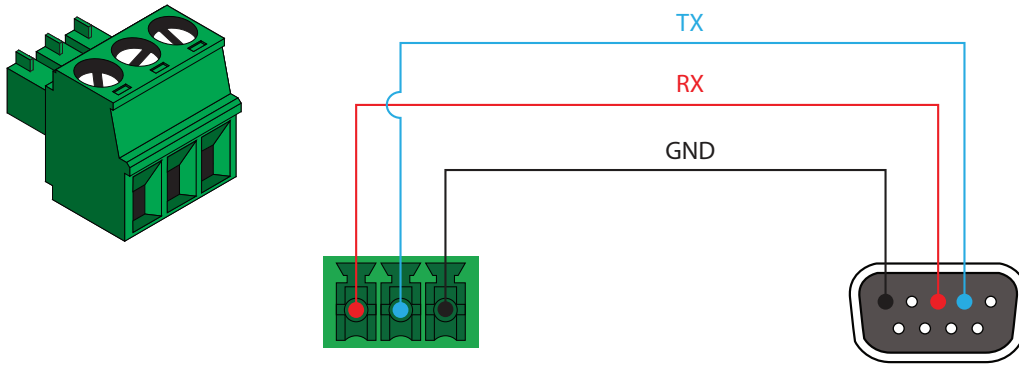

RS-232 is often connected through a DB 9-pin to captive screw connector. The pins will have functions associated with them, some will be unassigned.

NOTE: Typical DB9 connectors use pin 2 for TX, pin 3 for RX, and pin 5 for ground. On some devices functions of pins 2 and 3 are reversed.

Pin out will be determined by the RS-232 cable and connect as RX (receive), TX (transmit) and GND (ground).

Baud parameters must be met for control signals to pass. The parameters can be updated through the built in webGUI. The defaults for the RS-232 ports are: 9600, 8-bit, None, 1.

Commands

The following tables provide an alphabetical list of commands available for AT-OME-ST31A. Commands are case-sensitive. If the command fails or is entered incorrectly, then the feedback is “Command FAILED”. Commands can be sent using RS-232 or Telnet. There should be a 500 millisecond delay between each command sent to the unit. The default port for Telnet is 23.



IMPORTANT: Each command is terminated with a carriage-return (0x0d) and the feedback is terminated with a carriage-return and line-feed (0x0a).

Command	Description
Blink	Enables or disables blinking of the POWER button on the front panel
CommaWait	Enables or disables a comma adding a 5 second delay between commands
DispBtn	Simulates pressing the DISPLAY button on the front panel
help	Displays a list of available help commands
InputStatus	Displays the status for each input
IP802.1x	Sets the security authentication type
IPCFG	Displays IP address configuration
IPDHCP	Turns DHCP on / off
IPStatic	Sets a static IP address
Lock	Locks the buttons on the front panel
LRAUD	Mutes the audio on the analog output
Mreset	Sets the unit back to default settings
PWOFF	Execute this command to power-off the unit
PWON	Execute this command to power-on the unit
PWSTA	Displays the power state of the unit
RepCmdTime	Sets the number of times a command is repeated
RepeatCmd	Enables or disabled the RepCmdTime feature
RHostName	Displays the host name for the AT-OME-ST31A
RS232zone	Triggers the unit to send the RS-232 command to the display connected to the HDBaseT receiver's RS-232 port
SHostName	Sets the host name for the unit
Status	Displays the routing state of the unit
Type	Displays the model of the unit
Unlock	Unlocks the buttons on the front panel
Version	Displays the current firmware version of the unit
VOUTMute	Mutes the output volume for the specified output
xY\$	Mutes/Unmutes AV signals for the specified output channel
xYAVxZ	Switches the specified input to the specified output

Commands

Blink

Enables or disables blinking of the **POWER** button on the front panel. When set to on, the **POWER** button will flash blue, and can be used to physically identify the unit on a network. The **POWER** button will flash until the Blink off command is executed. on = enables blinking; off = disables blinking; sta = displays the current setting. The default setting is off.

Syntax

Blink X

Parameter	Description	Range
X	Value	on, off, sta

Example

Blink on

Feedback

Blink on

CommaWait

Adds a 5 second delay between commands, when a comma is included

Syntax

CommaWait X

Parameter	Description	Range
X	Value	on, off, sta

Example

CommaWait on

Feedback

CommaWait on

DispBtn

Sets the command triggered through display control (set in the webGUI).

Syntax

DispBtn X

Parameter	Description	Range
X	State	on, off, tog, sta

Example

DispBtn on

Feedback

DispBtn on



NOTE: The feedback will display channel status: 0 is no signal detected and 1 is signal detected.

help

Displays the list of available commands. To obtain help on a specific command, enter the **help** command followed by the name of the command.

Syntax

```
help [X]
```

Parameter	Description	Range
X	Command name (optional)	Command

Example

```
help
```

Feedback

```
Blink  
CommaWait  
DispBtn  
System  
IPCFG  
IPStatic  
...  
...
```

InputStatus

Displays the status of the specified input as either a 0 or 1. If a source is detected on the input, then a 1 will be displayed. Inputs with no source connected will display a 0.

Syntax

```
InputStatus
```

This command does not require any parameters

Example

```
InputStatus
```

Feedback

```
InputStatus 010
```

IP802.1x

Sets the security setting for use with RADIUS server authentication. Use the sta argument to display the current setting.

Syntax

```
IP802.1x X
```

Parameter	Description	Range
X	Security setting	disable, PEAP, TTLS, TLS, sta

Example

```
IP802.1x TTLS
```

Feedback

```
IP802.1x TTLS
```

IPCFG

Displays the current network settings for the unit.

Syntax

```
IPCFG
```

This command does not require any parameters

Example

```
IPCFG
```

Feedback

```
Mac Addr:  B8:98:B0:05:DF:F7
IP Addr:    10.0.1.101
Netmask:    255.255.255.0
Gateway:    10.0.1.1
Telnet Port: 23
HTTP Port:  80
```

IPDHCP

Enables or disables DHCP mode on the unit. on = enables DHCP mode; off = disables DHCP mode; sta = displays the current setting. If this feature is disabled, then a static IP address must be specified for the unit. Refer to the [IPStatic](#) command for more information.

Syntax

```
IPDHCP X
```

Parameter	Description	Range
X	Value	on, off, sta

Example

```
IPDHCP on
```

Feedback

```
IPDHCP on
```

IPStatic

Sets the static IP address, subnet mask, and gateway (router) address of the unit. Before using this command, DHCP must be disabled on the unit. Refer to the **IPDHCP** command for more information. Each argument must be entered in dot-decimal notation and separated by a space. The default static IP address is 192.168.1.254.

Syntax

```
IPStatic X Y Z
```

Parameter	Description	Range
X	IP address	0 ... 255 (per byte)
Y	Subnet mask	0 ... 255 (per byte)
Z	Gateway (router)	0 ... 255 (per byte)

Example

```
IPStatic 192.168.1.112 255.255.255.0 192.168.1.1
```

Feedback

```
IPStatic 192.168.1.112 255.255.255.0 192.168.1.1
```

Lock

Locks the buttons on the front panel. This feature is useful when the unit is installed in a rack environment or other remote location, to prevent unauthorized tampering or accidental pressing of the front-panel buttons. Also refer to the **Unlock** command.

Syntax

```
Lock
```

This command does not require any parameters

Example

```
Lock
```

Feedback

```
Lock
```

Commands

LRAUD

Enables / disables the audio on the analog audio output.

Syntax

LRAUD

Parameter	Description	Range
X	Status	on, off, sta

Example

LRAUD off

Feedback

LRAUD off

Mreset

Resets the unit to factory-default settings.

Syntax

Mreset

This command does not require any parameters

Example

Mreset

Feedback

Mreset

PWOFF

Executing this command will power-off the unit. Execute the **PWON** command to power-on the unit.

Syntax

PWOFF

This command does not require any parameters

Example

PWOFF

Feedback

PWOFF

PWON

Executing this command will power-on the unit. Use the **PWOFF** command to power-off the unit.

Syntax

PWON

This command does not require any parameters

Example

PWON

Feedback

PWON

PWSTA

Displays the current power state of the unit.

Syntax

PWSTA

This command does not require any parameters

Example

PWSTA

Feedback

PWON

RepCmdTime

Sets the number of time a command will be sent. Specify the sta argument to display the current setting.

Syntax

RepCmdTime X

Parameter	Description	Range
X	Times to repeat command	2 ... 4, sta

Example

RepCmdTime 3

Feedback

RepCmdTime 3

Commands

RepeatCmd

Enables / disables the **RepCmdTime** feature. Specify the sta argument to display the current setting.

Syntax

```
RepeatCmd X
```

Parameter	Description	Range
X	Status	on, off, sta

Example

RepeatCmd on

Feedback

RepeatCmd on

RHostName

Displays the hostname of the unit.

Syntax

```
RHostName
```

This command does not require any parameters

Example

RHostName

Feedback

RHostName OMEST31-010C90

RS232zone

Sends commands to the HDBaseT device. Refer to the User Manual of the display device for a list of available commands. Brackets must be used when specifying the command argument. The command line must not contain any spaces.

Syntax

```
RS232zone[X]
```

Parameter	Description	Range
X	Command	String

Example

RS232zone[command]

Feedback

RS232zone[command]

Commands

SHostName

Sets the hostname of the unit. The string name must not contain any spaces.

Syntax

```
SHostName X
```

Parameter	Description	Range
X	Name	String

Example

```
SHostName AT-OME-ST31A_Huddle1
```

Feedback

```
SHostName AT-OME-ST31A_Huddle1
```

Status

Displays which input is routed to which output. Refer to the **xYAVxZ** command for more information.

Syntax

```
Status
```

This command does not require any parameters

Example

```
Status
```

Feedback

```
x2AVx1,x2AVx2
```

Type

Displays the model information of the unit.

Syntax

```
Type
```

This command does not require any parameters

Example

```
Type
```

Feedback

```
AT-OME-ST31A
```

Unlock

Unlocks the buttons on the front panel. Also refer to the [Lock](#) command.

Syntax

```
Unlock
```

This command does not require any parameters

Example

```
Unlock
```

Feedback

```
Unlock
```

Version

Displays the current firmware version of the unit.

Syntax

```
Version
```

This command does not require any parameters

Example

```
Version
```

Feedback

```
1.0.05
```

VOU TMute

Mutes / unmutes the output volume for the specified output. The first argument references the output: 1 = HDMI, 2 = HDBaseT.

Syntax

```
VOU TMute X Y
```

Parameter	Description	Range
X	Output	1, 2
Y	State	on, off, sta

Example

```
VOU TMute 2 off
```

Feedback

```
VOU TMute 2 off
```

Commands

xY\$

Enables / disables video for the specified output. The first argument references the output: 1 = HDMI, 2 = HDBaseT.

Syntax

xY\$ Z

Parameter	Description	Range
Y	Output	1, 2
Z	State	on, off, sta

Example

x2\$ off

Feedback

x2\$ off

xYAVxZ

Switches the specified input to the specified output. The first argument references the input: 1 = USB-C, 2 = HDMI 1, 3 = HDMI 2. The second argument must always be 1. Both HDMI and HDBaseT outputs will output the same source signal. Note that the feedback will display that the specified input is being routed to both output 1 (HDMI) and output 2 (HDBaseT), as shown below.

Syntax

xYAVxZ

Parameter	Description	Range
Y	Input	1 ... 3
Z	Output	1

Example

x3AVx1

Feedback

x3AVx1

