

# Select-Alert Mini Controller

STI-SA5000 SERIES





#### **Features**

- Use as a cabinet alert, door alert, link with push button/switch or as a burglar alert.
- Independent strobe and siren timing of 15 seconds, 30 seconds, 60 seconds or continuous.
- · Durable, polycarbonate construction.
- $\cdot\,\,$  Includes ten high intensity LEDs.
- · Siren offers 32 user selectable tones.
- $\cdot\,\,$  Choose piercing 100 or 85 dB alert.
- · For indoor use only.

- Available with amber, green, blue, red or white lens.
- Includes a tamper switch which triggers the alert when unit is being removed from a wall.
- · Low battery indicator.
- Powered by a 9 VDC battery (not included) or external 12 24 volts.
- One Form "C" dry relay contact output.

## **CONTENTS**

Warnings and Cautions	page 3
Warranty Information	page 3
Dimensions	
Specifications	page 4
Electronic Setup	page 4
Alert Tones	page 5
Alert Timing and Volume	page 5
Terminal Strip Connections	page 6
Mounting Options	page 6
Electronics Final Assembly	page 8

## **SELECT-ALERT ASSEMBLY PARTS LIST**

1 - E05000	Electronics Assembly			
1 - M05050*	Color Lens * (A, B, G, R, W)			
4	Screw #6 x 5/8 in.			
4	Screw #8-32 x 3/8 in.			
2	Screw #6 x 1 1/4 in.			
2	Anchor #8-10			
2	Screw #6-32 x 1 1/2 in.			
1	#8-32 x 1/2 in. tamper screw			
1 - H19016	Tamper wrench			

# ACCESSORIES

KIT-71100A-W	Backbox kit
KIT-E18151	N.C. reed switch and magnet
KIT-SA505	Key switch mounting bracket (includes key switch & 2 keys)
KIT-H18075	Additional replacement key, set of 2
KIT-H19016	Tamper Wrench, set of 2

#### **WARNINGS**

All units are recommended for indoor use. Unit must be tested periodically to verify the life of battery. STI recommends you change the 9 Volt battery twice a year. When purchasing a Select-Alert, you will need to periodically test the connections to make sure audibles function at a sound level to alert staff. Installer may need to purchase a simple audio-meter, typically available at your local electronics store, to measure the sound in areas where the alert is expected to be heard during normal noise environment. Results from this test may prove it beneficial to purchase additional Select-Alert units.


All specifications and information shown are current as of publication and subject to change without notice.


#### WARRANTY

Three year warranty or a one year limited warranty (from date of purchase) on most products. See website for details. Electronic warranty form at www.sti-usa.com/wc14.

MARNING: This product can expose you to chemicals including Dichloromethane, which is known to the State of California to cause cancer, and Bisphenol A (BPA), which is known to the State of California to cause birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov.

## **DIMENSIONS**

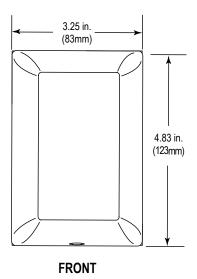


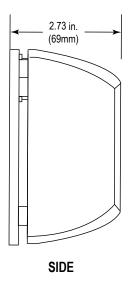

#### **SPECIFICATIONS**


Operating Voltage	Internal power 9 VDC battery (not included)		
Operating Temperature	32°F-120°		
Power Consumption	Stand by: 50µA		
	Siren low volume: 85mA		
	Siren high volume: 90mA		
	Strobe: 25mA		
Siren Volume	Low: 85 dB		
	High: 100 dB		
Alert Timing	Independent control for siren and strobe:		
	15s, 30s, 60s, continuous		
Low Battery Warning	LED flash once every 30 seconds		
Form C Dry Contacts	0-30VAC/DC, 1 Amp		
	Contacts reset after longest alert setting		
Key Switch	Alarm on: normally closed		
Alarm Switch	Stand by: normally open contact required		
Polycarbonate	UL94V-2		
Flammability Rating			

# **INSTALLATION**

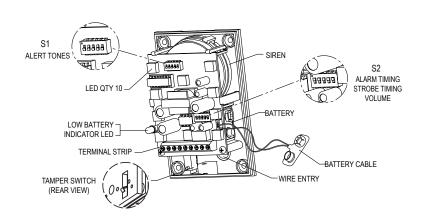


#### Step 2 - Alert Tones - S1

	12345				12345	
1	00000	BUZZ		17	00001	STANDARD Alert
2	10000	SLOW ON/OFF		18	10001	#3 FAST
3	01000	SLOW SIREN		19	01001	#5 SLOW
4	11000	3 BEEP/PAUSE/REPEAT		20	11001	FAST BEEP
5	00100	UFO FAST		21	00101	SOUND A
6	10100	FAST SIREN		22	10101	SOUND B
7	01100	#5 FAST	_	23	01101	SOUND C
8	11100	#2 MEDIUM		24	11101	SOUND D
9	00010	#5 MEDIUM	_	25	00011	SOUND D LOUD
10	10010	SWOOP MEDIUM	_	26	10011	SOUND E
11	01010	#3 MEDIUM	_	27	01011	SOUND F
12	11010	BUZZ TONE	_	28	11011	SOUND G
13	00110	STEADY FAST	_	29	00111	SOUND H
14	10110	SWOOP SLOW	_	30	10111	#4 LOW
15	01110	CONTINUOUS	_	31	01111	SOUND K
16	11110	FAST REPEAT	-	32	11111	CONTINUOUS FAST
			_			

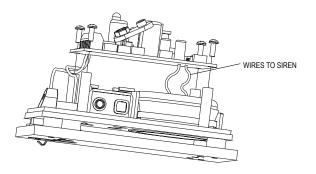

**NOTE:** Sound may be disabled by clipping wires to the siren. THIS WILL VOID ALL WARRANTIES. Remove two screws on circuit board; leave enough length of wire to possibly reattach in the future. Then insulate wires to prevent shorting to electronic components.

## Step 3 - Alert Timing and Volume - S2

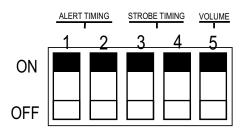

Alert	Siren		Strobe		Volume
Timing	1	2	3	4	5
15 seconds	1	1	1	1	High
30 seconds	1	0	1	0	1
60 seconds	0	1	0	1	Low
Continuous	0	0	0	0	0


1 = ON 0 = OFF Factory default settings

### Step 4 - Terminal Strip Connections

"DC IN" are the only polarity sensitive terminals. When external power is used, battery will act as a backup. "Dry Contacts: NC, COM, NO" are used for remote alert monitoring.

\*\*Shipped with jumper wire installed. Remove to add key switch or other main power on/off switch.


If using power only to trigger alert, add jumper to the alarm switch terminals. If not using key switch or other main power on/off, key switch must also have jumper.

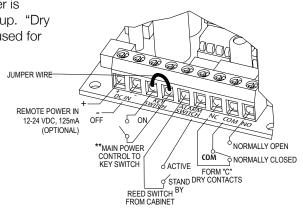


# **Step 5 - Mounting Options** A) To STI Back Box KIT-71100A-W

- 1. Using 5/32 drill, drill through the (4) existing holes in back box (one in each corner).
- 2. Place back box on wall and mark the mounting hole positions.
- 3.If using #8-10 anchors, drill 3/16 dia. holes 1 in. deep into wall and press anchor into hole. If using #6 screws only, drill 3/32 dia, holes 1 ¼ in, deep,
- 4. Mount back box to wall using #6 x 1 1/4 in. screws.
- 5. Mount base plate as shown using (2) #6-32 x 1 in. screws.


Note: If not using STI back box, make sure surface will depress tamper switch.

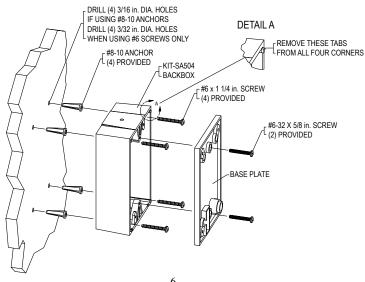


# B) To Key Mount Plate or into Wall without Electrical Box

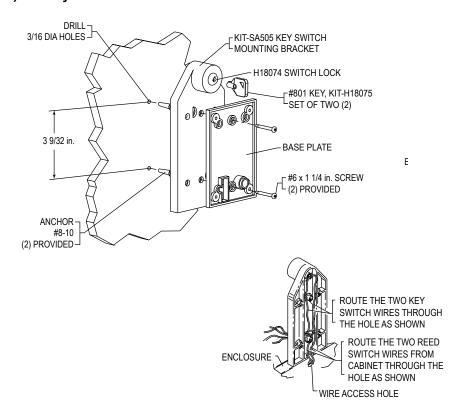

## C) To Single Gang Electrical Box

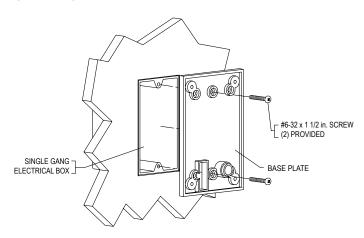

# **Step 6 - Electronics Final Assembly**

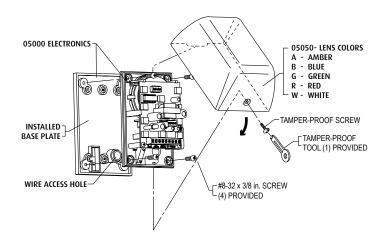

**Wiring:** After mounting circuit board assembly, connect wires. Refer to terminal strip connections (step 4).

**Lens installation:** Slide lip of lens behind circuit board mounting plate. Rotate lens into position. Secure with tamperproof screw and special wrench.

#### Step 7 - Operation

- Turn key switch on to arm.
- Cycle key switch to reset alert.
- Alert will sound when cover is removed, unit is removed from the wall or cabinet is opened (alert switch is electronically closed).
- To service, turn key switch off.



2306 Airport Rd • Waterford, MI 48327, USA Phone: 248-673-9898 • info@sti-usa.com • www.sti-usa.com

Taylor House • 34 Sherwood Road • Bromsgrove, Worcestershire • B60 3DR • England Tel: +44 (0)1527 520 999 • info@sti-emea.com • www.sti-emea.com

Unit 7A • Lockhead Avenue • Airport Business Park • Waterford • X91 HWF2 • Ireland info@sti-emea.com • www.sti-emea.com

Printed in USA Inst. Sht. SA5000, Aug2021